




1) Tools/hardware required: Pump, screw driver, board grab handle with appropriate screws (these come with your board)



2) Insert end of grab handle into webbing loop. Pass screw through hole in grab handle and hole in webbing loop.



3) Position Go Joe so holes line up with grab handle screw inserts. Adjust Go Joe angle so base plate is not extending past rail of board. Screw Go Joe into place.

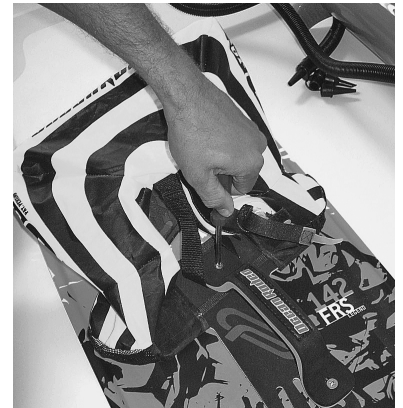

4) Pump up until firm! A soft Go Joe will not roll your board over.



5) Go Joe ready to roll!

